



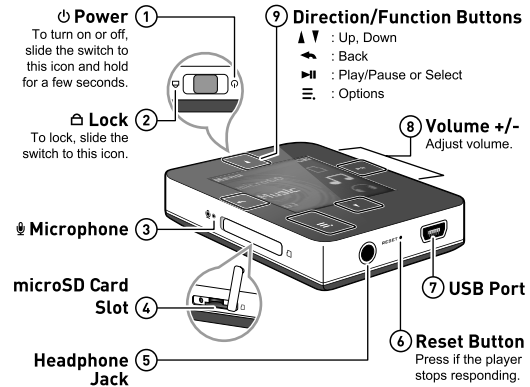


1 Charging Your Player

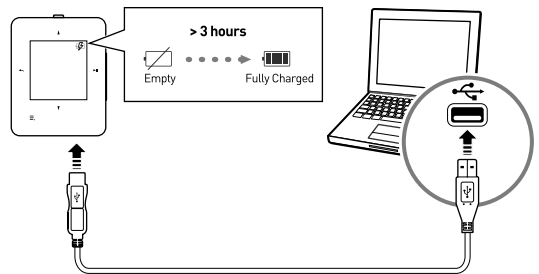

To charge from a power outlet, use a ZEN USB Power Adapter (sold separately). For more information, visit www.creative.com/zenadapter.

2 Accessing the User Guide

The user guide contains both user instructions and safety information. To read it, browse to the **Documentation** folder on your player, followed by the subfolder for your language, and double-click the file, **ZEN Style M User Guide.chm**.

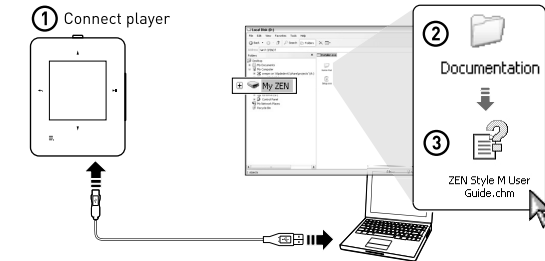

3 Loading Contents to Your Player

1. With the player connected to your computer, start **Windows Media Player**.
2. Make sure that your contents are in personal folders specified under **Windows Media Player**, namely, **My Music**, **My Pictures**, and **My Videos**.
3. Click **Sync > My ZEN > Set Up Sync**.
4. Follow the instructions on the screen to complete the synchronization.

4 Navigating Menus and Options



(A) Main Menu

To return to the main menu, press ◀.

To navigate menus and options, press ▲ or ▼.

To select an item, press ▶▶.



(B) Submenu

At a menu, press ▲ or ▼ to highlight an item, and then press ▶▶ to select.

To return to the previous screen, press ◀.



(C) Options

At any menu, press ≡ to view the available options.

To exit, press ◀.



5 Setting Basic Functions

Setting Menu Language

1. On the main menu, select **System > Language**.
2. Select the language that you want, and press ►II.

Scanning for FM Radio Channels*

1. Connect the earphones to your player.
2. On the main menu, select **FM Radio**.
You will be prompted to start the Autoscan function.
3. Press ►II to select **Yes**.

Repeating/Shuffling Music

1. On the main menu, select **Music > Now Playing**.
2. Press ≡.
3. Select the desired option.

6 Using the *Bluetooth*® Wireless Feature*

You can stream music from your player to *Bluetooth* compatible speakers or headphones.

Turning on *Bluetooth*

1. On the main menu, select **System > Bluetooth Settings > Bluetooth OFF**.
2. Press ►II to switch to **Bluetooth ON**.

Pairing with a *Bluetooth* device

1. On the **Bluetooth Settings** menu, select **Scan for devices**.
A list of available *Bluetooth* devices appears.
2. Press ►II to select the desired *Bluetooth* device.

Streaming music to a *Bluetooth* device

1. On the **Bluetooth Settings** menu, select **BT Stream OFF**.
2. Press ►II to switch to **BT Stream ON**.

Alternatively, press ≡ in the **Now Playing** mode and select the desired option.

* The FM radio and *Bluetooth* options are available on M300 only.

7 More Information

To download the latest software, firmware, and User Guide, visit www.creative.com/getstarted/zenstylem100 or www.creative.com/getstarted/zenstylem300.

To register your player, visit www.creative.com/register.
Please note that warranty rights are not dependent on product registration.

For Creative's Customer Support services, visit www.creative.com/support.

Take good care of your hearing. Avoid listening to music at very loud volume.
To learn more on listening safely, read the user guide.

ZEN Style



03PF255100001RevA

Copyright © 2011 Creative Technology Ltd. All rights reserved. Creative and ZEN are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries. The *Bluetooth* word mark and logo are owned by Bluetooth SIG, Inc. and any use of such marks by Creative Technology Ltd is under license.

快速开始
快速入門
クイックスタート
요약 설명서
Quick Start